

ailleun I シリーズ カメラ操作一覧

ailleun I シリーズ (YS-1000/YS-1000M/YS-1000MC) からカメラ操作を行った場合のカメラ機種ごとの動作です。

ソフトウェア・バージョンは最新である必要があります。

● Panasonic (カメラ BB)

	パン・チルト	ズーム	フォーカス	オートフォーカス
BB-ST162	○	○	×	×
BB-ST165	○	○	×	×
BB-SW172	○	○	×	×
BB-SW175	○	○	×	×
BB-SW174W	○	○	×	×
BB-SC384	○	○	○	○
BB-HCM735	○	△	×	×
BB-HCM715	○	△	×	×
BB-HCM705	×	△	×	×
BB-HCM701	×	×	×	×
BB-HCM581	○	○	○	○
BB-HCM580	○	○	○	○
BB-HCM547	○	○	×	×
BB-HCM527	○	○	×	×
BB-HCM531	○	×	×	×

BB-HCM515	○	×	×	×
BB-HCM511	○	×	×	×
BB-HCM110	○	×	×	×
BB-HCM100	×	×	×	×

○：動作します △：動作保証外です ×：動作しません

●Panasonic (i-pro)

	パン・チルト	ズーム	フォーカス	オート フォーカス
DG-SF539	×	×	×	×
DG-SC385	○	○	○	○
DG-SW395(J)	○	○	○	○
DG-SW355	×	×	×	×
DG-SP102	×	×	×	×
DG-SP304V	×	×	×	×
DG-SP305	×	×	×	×
DG-NP244	×	○	×	×
DG-NP304	×	×	×	×
DG-NP502	×	×	×	×
DG-NW502S	×	×	×	×
DG-SF334	×	×	×	×
DG-SF335	×	×	×	×
DG-NF282	×	○	×	×

DG-NF282WD	×	○	×	×
DG-NF302	×	×	×	×
DG-NS202A	○	○	○	○
DG-SF132	×	×	×	×
DG-SF135	×	×	×	×
DG-SW155	×	×	×	×
DG-SP509(J)	×	×	×	×
DG-SW559	×	×	×	×
DG-NW960	○	○	○	○
DG-SW314(J)	×	×	×	×
DG-SW316(J)	×	×	×	×
DG-SW316L(J)	×	×	×	×
DG-SW396(J)	○	○	○	○
DG-SC386	○	○	○	○
DG-GXE100	×	×	×	×
DG-SW395A(J)	○	○	○	○
DG-SW396A(J)	○	○	○	○
DG-SF438	×	×	×	×
DG-SW458	×	×	×	×
WV-SF138	×	×	×	×
WV-SW158	×	×	×	×

WV-SC588	○	○	○	○
WV-SW598J	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

●AXIS

	パン・チルト	ズーム	フォーカス	オート フォーカス
M5014	○	○	×	×
M5013	○	○	×	×
P3344	×	×	×	×
P3343	×	×	×	×
P3304	×	×	×	×
P3301	×	×	×	×
M3204	×	×	×	×
M3203	×	×	×	×
M3014	×	×	×	×
M3011	×	×	×	×
P1346	×	×	×	×
P1344	×	×	×	×
P1343	×	×	×	×
P1311	×	×	×	×
M1114	×	×	×	×
M1113	×	×	×	×

M1104	×	×	×	×
M1103	×	×	×	×
M1054	×	×	×	×
M1011	×	×	×	×
M7001	×	×	×	×
M3113-R(-VE)	×	×	×	×
M3114-R(-VE)	×	×	×	×
M1054	×	×	×	×
M2014-E	×	×	×	×
P1353	×	×	×	×
P1354	×	×	×	×
P1355	×	×	×	×
M3006-V	×	×	×	×
P1204	×	×	×	×
P1214	×	×	×	×
Q7404	△	△	△	△
Q1602	×	×	×	×
Q1604	×	×	×	×
P3353	×	×	×	×
P3354	×	×	×	×
P3363-V	×	×	×	×

P3363-VE	×	×	×	×
P3364-VE	×	×	×	×
P3364-LVE	×	×	×	×
P3364-V	×	×	×	×
P3364-LV	×	×	×	×
P3346	×	×	×	×
P5512	○	○	○	○
P5522	○	○	○	○
P5532	○	○	○	○
P5534	○	○	○	○
P3384-V	×	×	×	×
P3384-VE	×	×	×	×
Q7401	△	△	△	△

○：動作します △：動作保証外です ×：動作しません

●SONY

	パン・チルト	ズーム	フォーカス	オート フォーカス
SNC-CH280	×	○	○	○
SNC-CH260	×	○	○	○
SNC-CH240	×	×	○	○
SNC-CH220	×	×	○	○
SNC-CH210	×	×	×	×

SNC-CH180	×	○	○	○
SNC-CH160	×	○	○	○
SNC-CH140	×	×	○	○
SNC-CH120	×	×	○	○
SNC-CH110	×	×	×	×
SNC-DH280	×	○	○	○
SNC-DH260	×	○	○	○
SNC-DH240	×	○	○	○
SNC-DH220	×	○	○	○
SNC-DH210	×	×	×	×
SNC-DH180	×	○	○	○
SNC-DH160	×	○	○	○
SNC-DH140	×	○	○	○
SNC-DH120	×	○	○	○
SNC-DH110	×	×	×	×

○：動作します △：動作保証外です ×：動作しません