

aileunIVシリーズ カメラ操作一覧

aileunIVシリーズ (YS-1700/YS-2200/YS-2200M/YS-2200MC/YS-3200M/YS-3200MC) からカメラ操作を行った場合のカメラ機種ごとの動作です。
ソフトウェア・バージョンは最新である必要があります。

●Panasonic (カメラ BB)

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
BB- HCM100	×	×	×	×	×	×
BB- HCM110	○	×	×	×	○	○
BB- HCM511	○	×	×	×	△	△
BB- HCM515	○	×	×	×	△	△
BB- HCM527	○	○	×	×	○	○
BB- HCM531	○	×	×	×	△	△
BB- HCM547	○	○	×	×	△	△
BB- HCM580	○	○	○	○	○	○
BB- HCM581	○	○	○	○	○	○
BB- HCM701	×	×	×	×	×	×
BB- HCM705	×	△	×	×	×	×
BB- HCM715	○	△	×	×	○	○

BB-HCM735	○	△	×	×	△	△
BB-SC364	○	○	○	○	○	○
BB-SC382	○	○	○	○	○	○
BB-SC384	○	○	○	○	○	○
BB-SP104W	×	×	×	×	×	×
BB-ST162	○	○	×	×	△	△
BB-ST165	○	○	×	×	○	○
BB-SW172	○	○	×	×	△	△
BB-SW174W	○	○	×	×	△	△
BB-SW175	○	○	×	×	○	○
BB-SW374	○	○	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

● Panasonic (i-pro)

	パン・チルト	ズーム	フォーカス	オートフォーカス	ホームポジション	プリセット
DG-NF282	×	○	×	×	×	×
DG-NF302	×	×	×	×	×	×
DG-NP244	×	○	×	×	×	×
DG-NP304	×	×	×	×	×	×
DG-NP502	×	×	×	×	×	×
DG-NS202A	○	○	○	○	○	○
DG-NW502S	×	×	×	×	×	×
DG-NW960	○	○	○	○	△	△
WJ(DG)-GXE100	△	△	△	△	△	△
WJ(DG)-GXE500	△	△	△	△	△	△
WV(DG)-S1110	×	×	×	×	×	×

WV(DG)- S1111	x	x	x	x	x	x
WV(DG)- S1112	x	x	x	x	x	x
WV(DG)- S1130	x	x	x	x	x	x
WV(DG)- S1131	x	x	x	x	x	x
WV(DG)- S1510	x	x	x	x	x	x
WV(DG)- S1511	x	x	x	x	x	x
WV(DG)- S1531	x	x	x	x	x	x
WV(DG)- S2110	x	x	x	x	x	x
WV(DG)- S2111	x	x	x	x	x	x
WV(DG)- S2130	x	x	x	x	x	x
WV(DG)- S2131	x	x	x	x	x	x
WV(DG)- S2511	x	x	x	x	x	x
WV(DG)- S2531	x	x	x	x	x	x
WV(DG)- S3110	x	x	x	x	x	x
WV(DG)- S3130	x	x	x	x	x	x
WV(DG)- S3510	x	x	x	x	x	x
WV(DG)- S3530	x	x	x	x	x	x

WV(DG)- S4150	△	△	△	△	△	△
WV(DG)- S4550	△	△	△	△	△	△
WV(DG)- S6110	○	○	○	○	○	○
WV(DG)- S6130	○	○	○	○	○	○
WV(DG)- S6111	○	○	○	○	○	○
WV(DG)- S6131	○	○	○	○	○	○
WV(DG)- S6530	○	○	○	○	○	○
WV(DG)- S6532	○	○	○	○	○	○
WV(DG)- SC385	○	○	○	○	○	○
WV(DG)- SC386	○	○	○	○	○	○
WV(DG)- SC387	○	○	○	○	○	○
WV(DG)- SC588	○	○	○	○	○	○
WV(DG)- SF132	×	×	×	×	×	×
WV(DG)- SF135	×	×	×	×	×	×
WV(DG)- SF138	×	×	×	×	×	×
WV(DG)- SF334	×	×	×	×	×	×
WV(DG)- SF335	×	×	×	×	×	×

WV(DG)- SF438	△	△	△	△	△	△
WV(DG)- SF539	×	×	×	×	×	×
WV(DG)- SFN110	×	×	×	×	×	×
WV(DG)- SFN130	×	×	×	×	×	×
WV(DG)- SFN310	×	×	×	×	×	×
WV(DG)- SFN311	×	×	×	×	×	×
WV(DG)- SFN480	△	△	△	△	△	△
WV(DG)- SFN531	×	×	×	×	×	×
WV(DG)- SFN611	×	×	×	×	×	×
WV(DG)- SFN631	×	×	×	×	×	×
WV(DG)- SFV110	×	×	×	×	×	×
WV(DG)- SFV130	×	×	×	×	×	×
WV(DG)- SFV311	×	×	×	×	×	×
WV(DG)- SFV481	△	△	△	△	△	△
WV(DG)- SFV531	×	×	×	×	×	×
WV(DG)- SFV611	×	×	×	×	×	×
WV(DG)- SFV631	×	×	×	×	×	×

WV(DG)- SP102	×	×	×	×	×	×
WV(DG)- SP105	×	×	×	×	×	×
WV(DG)- SP304	×	×	×	×	×	×
WV(DG)- SP305	×	×	×	×	×	×
WV(DG)- SP509	×	×	×	×	×	×
WV(DG)- SPN310	×	×	×	×	×	×
WV(DG)- SPN311	×	×	×	×	×	×
WV(DG)- SPN531	×	×	×	×	×	×
WV(DG)- SPN611	×	×	×	×	×	×
WV(DG)- SPN631	×	×	×	×	×	×
WV(DG)- SPW310	×	×	×	×	×	×
WV(DG)- SPW311	×	×	×	×	×	×
WV(DG)- SPW611	×	×	×	×	×	×
WV(DG)- SPW631	×	×	×	×	×	×
WV(DG)- SUD638	○	○	○	○	○	○
WV(DG)- SW155	×	×	×	×	×	×
WV(DG)- SW158	×	×	×	×	×	×

WV(DG)- SW314	×	×	×	×	×	×
WV(DG)- SW316	×	×	×	×	×	×
WV(DG)- SW355	×	×	×	×	×	×
WV(DG)- SW395	○	○	○	○	○	○
WV(DG)- SW396	○	○	○	○	○	○
WV(DG)- SW397	○	○	○	○	○	○
WV(DG)- SW458	△	△	△	△	△	△
WV(DG)- SW559	×	×	×	×	×	×
WV(DG)- SW598	○	○	○	○	○	○
WV(DG)- X4171	△	△	△	△	△	△
WV(DG)- X4571	△	△	△	△	△	△
WV(DG)- X6511	○	○	○	○	○	○
WV(DG)- X6531	○	○	○	○	○	○
WV(DG)- X6533	○	○	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

●AXIS

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
M1004-W	×	×	×	×	×	×
M1011	×	×	×	×	×	×

M1025	×	×	×	×	×	×
M1034-W	×	×	×	×	×	×
M1045	×	×	×	×	×	×
M1054	×	×	×	×	×	×
M1065	×	×	×	×	×	×
M1103	×	×	×	×	×	×
M1104	×	×	×	×	×	×
M1113	×	×	×	×	×	×
M1114	×	×	×	×	×	×
M1124	×	×	×	×	×	×
M1125	×	×	×	×	×	×
M1135	×	×	×	×	×	×
M1144	×	×	×	×	×	×
M1145	×	×	×	×	×	×
M2014-E	×	×	×	×	×	×
M2025	×	×	×	×	×	×
M3006	×	×	×	×	×	×
M3011	×	×	×	×	×	×
M3014	×	×	×	×	×	×
M3024	×	×	×	×	×	×
M3025	×	×	×	×	×	×
M3044	×	×	×	×	×	×
M3045	×	×	×	×	×	×
M3064	×	×	×	×	×	×
M3065	×	×	×	×	×	×
M3075	×	×	×	×	×	×
M3104	×	×	×	×	×	×
M3105	×	×	×	×	×	×
M3113	×	×	×	×	×	×
M3114	×	×	×	×	×	×
M3115	×	×	×	×	×	×
M3203	×	×	×	×	×	×
M3204	×	×	×	×	×	×
M5013	○	○	×	×	○	○
M5014	○	○	×	×	○	○

M5054	○	○	○	○	○	○
M5065	○	○	○	○	○	○
M5525	○	○	○	○	○	○
M7001	△	△	△	△	△	△
M7011	△	△	△	△	△	△
P1204	×	×	×	×	×	×
P1214	×	×	×	×	×	×
P1311	×	×	×	×	×	×
P1343	×	×	×	×	×	×
P1344	×	×	×	×	×	×
P1346	×	×	×	×	×	×
P1353	×	×	×	×	×	×
P1354	×	×	×	×	×	×
P1355	×	×	×	×	×	×
P1364	×	×	×	×	×	×
P1365	×	×	×	×	×	×
P1375	×	×	×	×	×	×
P1405	×	×	×	×	×	×
P1425	×	×	×	×	×	×
P1435	×	×	×	×	×	×
P1445	×	×	×	×	×	×
P3214	×	×	×	×	×	×
P3215	×	×	×	×	×	×
P3225	×	×	×	×	×	×
P3235	×	×	×	×	×	×
P3245	×	×	×	×	×	×
P3301	×	×	×	×	×	×
P3304	×	×	×	×	×	×
P3343	×	×	×	×	×	×
P3344	×	×	×	×	×	×
P3346	×	×	×	×	×	×
P3353	×	×	×	×	×	×
P3354	×	×	×	×	×	×
P3363	×	×	×	×	×	×
P3364	×	×	×	×	×	×

P3365	×	×	×	×	×	×
P3374	×	×	×	×	×	×
P3375	×	×	×	×	×	×
P3384	×	×	×	×	×	×
P5414	○	○	○	○	○	○
P5415	○	○	○	○	○	○
P5512	○	○	○	○	○	○
P5514	○	○	○	○	○	○
P5515	○	○	○	○	○	○
P5522	○	○	○	○	○	○
P5532	○	○	○	○	○	○
P5534	○	○	○	○	○	○
P5624	○	○	○	○	○	○
P5635	○	○	○	○	○	○
P5655	○	○	○	○	○	○
Q1602	×	×	×	×	×	×
Q1604	×	×	×	×	×	×
Q1614	×	×	×	×	×	×
Q1615	×	×	×	×	×	×
Q1635	×	×	×	×	×	×
Q1645	×	×	×	×	×	×
Q1755	×	○	○	○	×	×
Q1765	×	×	×	×	×	×
Q1775	×	○	○	○	○	○
Q1785	×	○	○	○	○	○
Q1941	×	×	×	×	×	×
Q3505	×	×	×	×	×	×
Q3515	×	×	×	×	×	×
Q3615	×	×	×	×	×	×
Q6042	○	○	○	○	○	○
Q6044	○	○	○	○	○	○
Q6054	○	○	○	○	○	○
Q6055	○	○	○	○	○	○
Q6075	○	○	○	○	○	○
Q6115	○	○	○	○	○	○

Q6125	○	○	○	○	○	○
Q6155	○	○	○	○	○	○
Q7401	△	△	△	△	△	△
Q7404	△	△	△	△	△	△
Q7411	△	△	△	△	△	△
Q8414	×	×	×	×	×	×
V5915	○	○	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

●SONY

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
SNC-CH110	×	×	×	×	×	×
SNC-CH120	×	×	○	○	×	×
SNC-CH140	×	×	○	○	×	×
SNC-CH160	×	○	○	○	×	×
SNC-CH180	×	○	○	○	×	×
SNC-CH210	×	×	×	×	×	×
SNC-CH220	×	×	○	○	×	×
SNC-CH240	×	×	○	○	×	×
SNC-CH260	×	○	×	×	×	×
SNC-CH280	×	○	×	×	×	×
SNC-CX600	×	×	×	×	×	×
SNC- CX600W	×	×	×	×	×	×
SNC-DH110	×	×	×	×	×	×
SNC-DH120	×	○	○	○	×	×

SNC-DH140	×	○	○	○	×	×
SNC-DH160	×	○	○	○	×	×
SNC-DH180	×	○	○	○	×	×
SNC-DH210	×	×	×	×	×	×
SNC-DH220	×	○	○	○	×	×
SNC-DH240	×	○	○	○	×	×
SNC-DH260	×	○	○	○	×	×
SNC-DH280	×	○	○	○	×	×
SNC-EB600	×	×	○	○	×	×
SNC-EB600B	×	×	×	×	×	×
SNC-EB602R	×	○	○	○	×	×
SNC-EB630	×	×	○	○	×	×
SNC-EB630B	×	×	×	×	×	×
SNC-EB632R	×	○	○	○	×	×
SNC-EB640	×	×	○	○	×	×
SNC-EB642	×	○	○	○	×	×
SNC-EM600	×	○	○	○	×	×
SNC-EM602R	×	○	○	○	×	×
SNC-EM630	×	○	○	○	×	×

SNC-EM632R	×	○	○	○	×	×
SNC-EM641	×	○	○	○	×	×
SNC-RS86N	○	×	×	×	△	△
SNC-VB600	×	×	○	○	×	×
SNC-VB600B	×	×	○	○	×	×
SNC-VB630	×	×	○	○	×	×
SNC-VB632	×	○	○	○	×	×
SNC-VB635	×	×	○	○	×	×
SNC-VB640	×	×	○	○	×	×
SNC-VB642	×	○	○	○	×	×
SNC-VM600B	×	○	○	○	×	×
SNC-VM600	×	○	○	○	×	×
SNC-VM602R	×	○	○	○	×	×
SNC-VM630	×	○	○	○	×	×
SNC-VM632R	×	○	○	○	×	×
SNC-VM642	×	○	○	○	×	×
SNC-WR600	○	×	×	×	○	○
SNC-WR602	○	×	×	×	△	△
SNC-WR630	○	×	×	×	○	○

SNC-WR632	○	×	×	×	△	△
SNC-XM631	×	×	×	×	×	×
SNC-XM632	×	×	×	×	×	×
SNC-ZB550	×	×	○	○	×	×
SNC-ZM550	×	○	○	○	×	×
SNT-EX101E	△	△	△	△	△	△
SNT-EX104	△	△	△	△	△	△

○：動作します △：動作保証外です ×：動作しません

● CANON

	パン・チルト	ズーム	フォーカス	オートフォーカス	ホームポジション	プリセット
VB-C500	×	×	×	×	×	×
VB-C60	○	○	×	○	×	×
VB-H41	○	○	×	○	×	×
VB-H43	○	○	×	○	×	×
VB-H45	○	○	×	○	×	×
VB-H610	×	×	×	○	×	×
VB-H630	×	×	×	○	×	×
VB-H651	×	×	×	○	×	×

VB-H652	×	×	×	○	×	×
VB-H710	×	×	×	○	×	×
VB-H730	×	×	×	○	×	×
VB-H751	×	×	×	○	×	×
VB-H760	×	○	×	○	×	×
VB-H761	×	○	×	○	×	×
VB-M40	○	○	×	○	×	×
VB-M42	○	○	×	○	×	×
VB-M44	○	○	×	○	×	×
VB-M50	○	○	×	○	×	×
VB-M600	×	×	×	○	×	×
VB-M620	×	×	×	○	×	×
VB-M640	×	×	×	○	×	×
VB-M641	×	×	×	○	×	×
VB-M700	×	×	×	○	×	×
VB-M720	×	×	×	○	×	×
VB-M740	×	×	×	○	×	×

VB-M741	×	×	×	○	×	×
VB-R10	○	○	×	○	×	×
VB-R11	○	○	×	○	×	×
VB-R12	○	○	×	○	×	×
VB-R13	○	○	×	○	×	×
VB-S30	○	○	×	○	×	×
VB-S31	○	○	×	×	×	×
VB-S800	×	×	×	×	×	×
VB-S805	×	×	×	×	×	×
VB-S900	×	×	×	×	×	×
VB-S905	×	×	×	×	×	×
VB-S910	×	○	×	○	×	×

○：動作します △：動作保証外です ×：動作しません

● ELMO

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
ESN-H2300	×	×	×	×	×	×
ESN-H2500	×	×	×	×	×	×
ESN- H2500VP	×	×	×	×	×	×

ESN-H8500WP	×	×	×	×	×	×
ESN-H9300	×	×	×	×	×	×
ESN-H9500	×	×	×	×	×	×

○：動作します △：動作保証外です ×：動作しません

●JVC ケンウッド

	パン・チルト	ズーム	フォーカス	オートフォーカス	ホームポジション	プリセット
VN-H128	×	×	×	×	×	×
VN-H137	×	×	×	×	×	×
VN-H157	×	×	×	×	×	×
VN-H168	×	○	×	×	×	×
VN-H228	×	×	×	×	×	×
VN-H237	×	×	×	×	×	×
VN-H257	×	×	×	×	×	×
VN-H268	×	×	×	×	×	×
VN-H28	×	×	×	×	×	×
VN-H37	×	×	×	×	×	×
VN-H328	×	×	×	×	×	×
VN-H57	×	×	×	×	×	×

VN-H678	○ (※7-1)	○ (※7-2)	×	×	○	○
---------	----------	----------	---	---	---	---

○：動作します △：動作保証外です ×：動作しません

※7-1：上下反転（卓上設置）時、パン・チルトの上下左右が逆に動作します。

※7-2：ズームの移動範囲が非常に大きいですが、カメラの仕様であり本機の異常ではありません。

●TOA

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
N-C3100	×	×	×	×	×	×
N-C3120	×	×	×	×	×	×
N-C3200	×	×	×	×	×	×
N-C3220	×	×	×	×	×	×
N-C3300	×	×	×	×	×	×
N-C3420	×	×	×	×	×	×
N-C3500	○	○	○	○	○	○
N-C3700	○	○	○	○	○	○
N-C3820	×	×	×	×	×	×
N-C5120	×	×	×	×	×	×
N-C5150	×	×	×	×	×	×
N-C5220	×	×	×	×	×	×
N-C5250	×	×	×	×	×	×

N-C5420	×	×	×	×	×	×
N-C5450	×	×	×	×	×	×
N-C5500	○	○	○	○	○	○
N-C5700	○	○	○	○	○	○
N-C5820	×	×	×	×	×	×
N-C5850	×	×	×	×	×	×

○：動作します △：動作保証外です ×：動作しません

● ONVIF

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
DS- 2CD2425F WD-I	×	×	×	×	×	×
DS- 2DE4A225I W-DE	○ (※9-1)	○	×	×	○	○
DS- 2DE4220IW -DE	○ (※9-1)	○	×	×	○	○
DS- 2CD2722F WD-IS	×	×	×	×	×	×
DS- 2CD2622F WD-IS	×	×	×	×	×	×
DH- SD22204TN	○	○	×	×	○	○

-GN (※9-2)						
JS-CW1012	×	×	×	×	×	×
JS-CW1020	×	×	×	×	×	×
JS-CW1028	×	×	×	×	×	×
JS-CW2020	×	×	×	×	×	×
JS-CW2021	×	×	×	×	×	×
PF-CW1019	×	×	×	×	×	×
PF-CW1025	×	×	×	×	×	×
NVT-DVI	×	×	×	×	×	×
YK-B021C	×	×	×	×	×	×
YK-B021F	×	×	×	×	×	×
YK-B081F	×	×	×	×	×	×
YK-D021B	×	×	×	×	×	×
YK-D081F	×	×	×	×	×	×
NPV-4065CD	×	×	×	×	×	×
NSC-SP942-2M	×	×	×	×	×	×
IPC2324EB R-DPZ28	×	×	×	×	×	×

WV-X8570	×	×	×	×	×	×
NC-1000	×	×	×	×	×	×
M2026-LE MkII	×	×	×	×	×	×
IPD- IZ42212T (※9-2)	○	○	×	×	○	○
IPD- W02230R-DZ (※9-2)	×	○	×	×	×	×
IPD- WD1236R	×	×	×	×	×	×
IPD-BX210	×	×	×	×	×	×
DS- 2TD1217B- 6/PA	×	×	×	×	×	×
DS- 2CD2625F WD-IZS	×	×	×	×	×	×
F41	×	×	×	×	×	×
F44	×	×	×	×	×	×
M4206-LV	×	×	×	×	×	×
GJ- IP4225PT- IR	○ (※9-1)	○	×	×	○	○

○：動作します △：動作保証外です ×：動作しません

※9-1：上下反転（卓上設置）時、パン・チルトの上下左右が逆に動作します。

※9-2：カメラの操作時に、操作から実際に動作するまでに数秒かかることがありますが、性能限界であり機器の異常ではありません。